


MOUNTING PROCEDURE

KIT WINDSHIELD
MV AGUSTA BRUTALE 2011
MV AGUSTA BRUTALE 675 2013

MB9300WWW.BARRACUDAMOTO.COM**KIT**

- X1. SPECIFIC BRACKET (PAIR)
- X1. WINDSHIELD/SCREEN
- X2. THICKNESS H 13 MM
- X2. SCREW 8X40
- X4. SCREW 5X12
- X4. TEFLON WASHER
- X8. RUBBER WASHER
- X4. SPECIAL BUSH
- X4. PROTECTIVE STICKER SPONGE

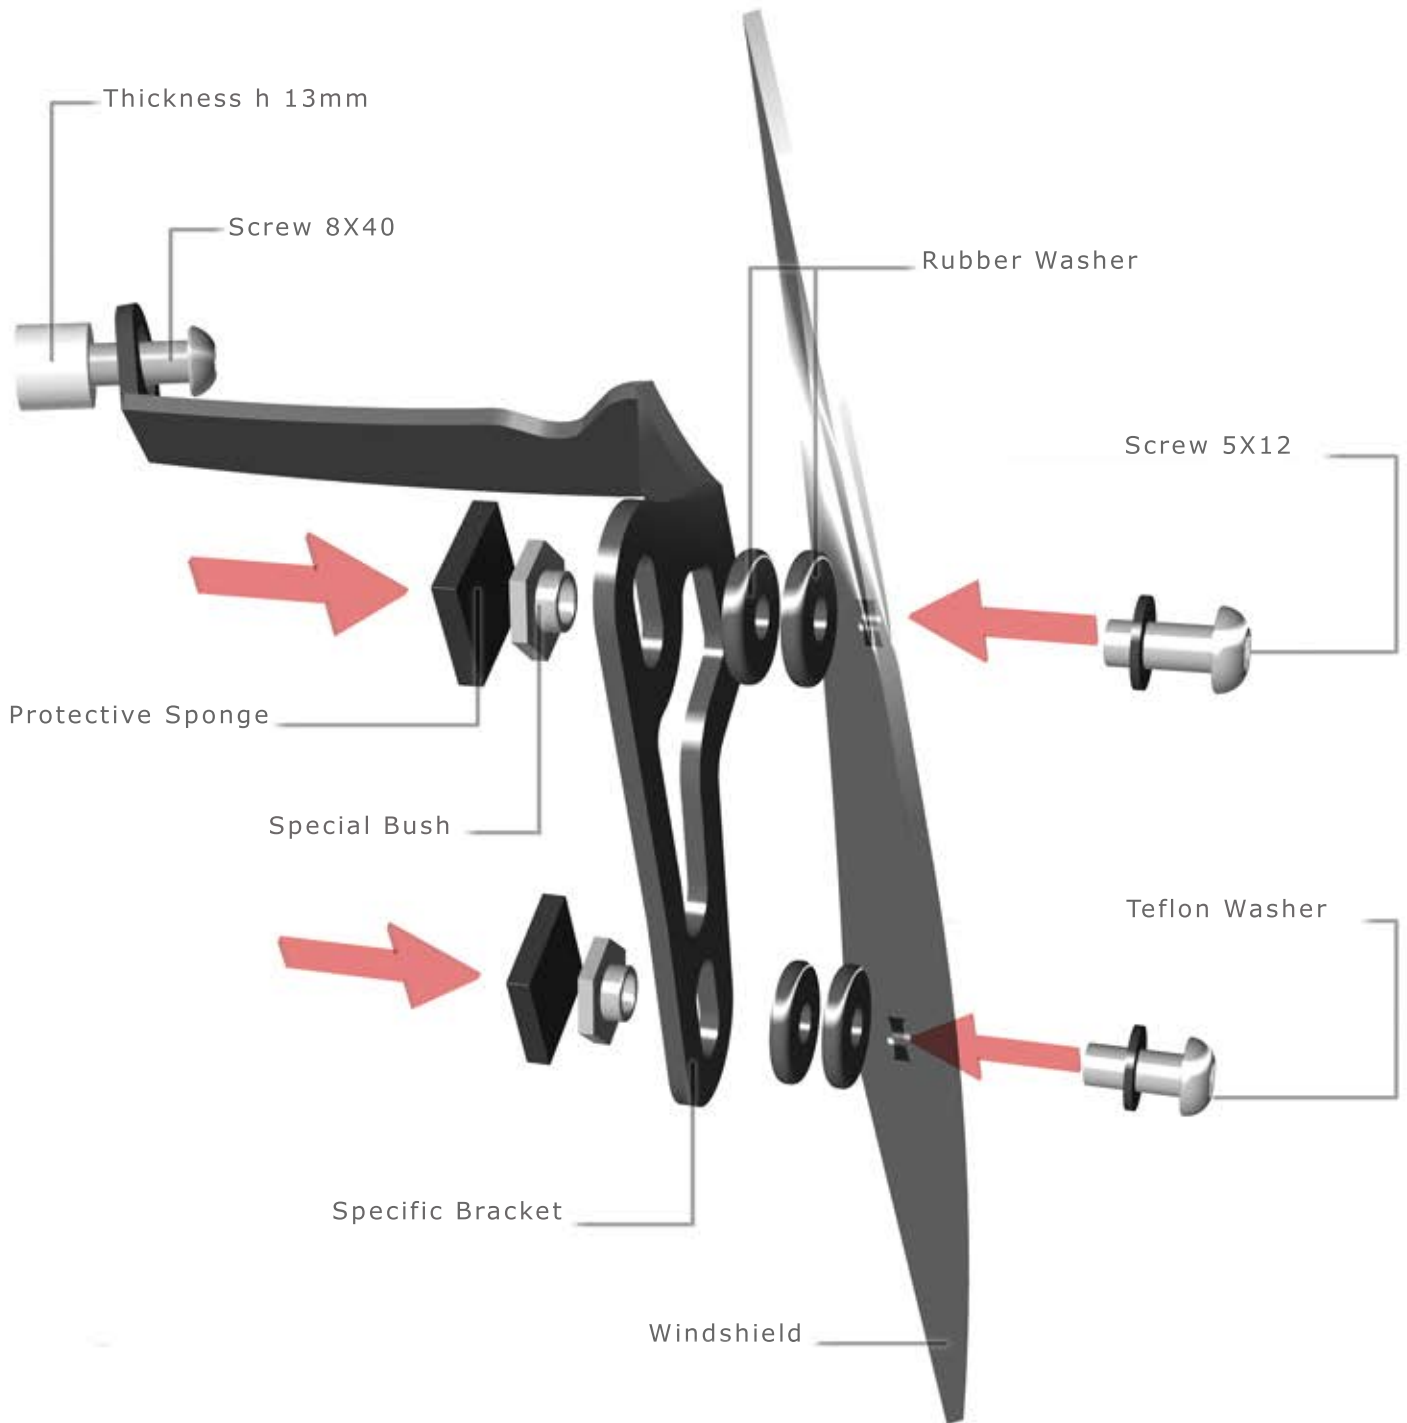

ASSEMBLE THE BARRACUDA WINDSHIELD/SCREEN USING THE SCREWS AND THICKNESS INCLUDED IN THE KIT. MOUNT ALL LIKE INSTRUCTION AND AT THE END UNSCREW THE SUPERIOR FORK SCREWS AND SUBSTITUE THEM WITH THE 8X40 SCREW TOGHTHER THE THICKNESS H 13 WITH. WE ADVICE TO LOCK ALL ONCE YOU MOUNT THE WINDSHIELD/SCREEN TO AVOID PLEXIGLASS DAMAGES DUE THE FORCING.